

# Commissioning Manual

**1** Connect AC22J to Noodoe OCPP URL (wss://ocpp.noodoe.com) before EV OS Commissioning

**2** Attach the Station Label Sticker as Shown Below.



Station ID: 1234568




**3** Noodoe EV OS Commissioning

**Step 1**

Scan the QR code to access the Installer Panel and initiate the charging station commissioning process.


**Step 2**

Input the Project Code provided by Noodoe or the charge point operator.

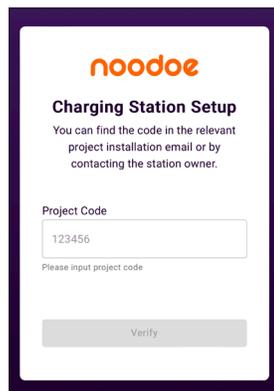

**Step 3**


Verify that the 7-digit auto-populated Station ID matches the 7 digits on the Station ID stickers.

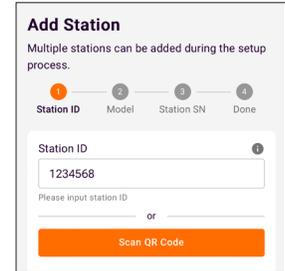

**Step 4**



Select the appropriate charger specifications:

- Output Details: **22kW, single output**
- Connector Type: **Type 2**

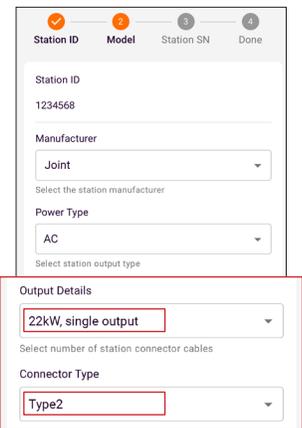

**Step 5**

Enter the station S/N number manually.

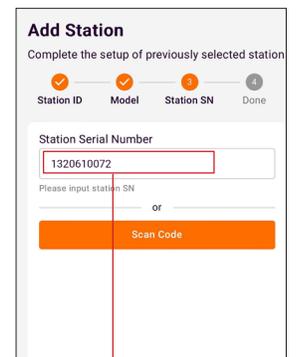

 Commissioning is now complete. The station can be found in Noodoe EV OS.