

EvoCharge EVSE

Commissioning Manual

1 Connect EvoCharge EVSE to Noodoe OCPP URL (<wss://ocpp.noodoe.com>) Before EV OS Commissioning.

2 Attach the Station Label Sticker as Shown Below




Station ID: 1234568

3 Noodoe EV OS Commissioning

Step 1

Scan **either** QR code to access the Installer Panel and initiate the charging station commissioning process.

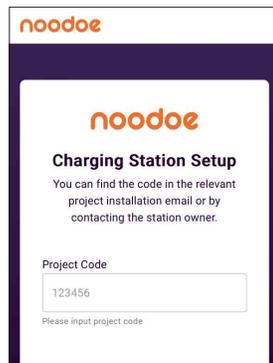


Step 2

Input the Project Code provided by Noodoe or the charge point operator.

Step 3

Verify that the 7-digit auto-populated Station ID matches the **7 digits** on the Station ID stickers.

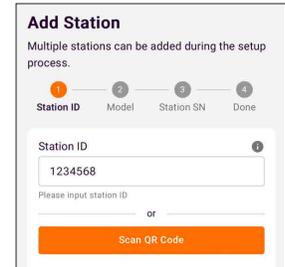

Step 4




Select the appropriate EvoCharge EVSE specifications:

- Output Details: **7kW, single output**
- Connector Type: **Type 1 (J-1772)**



Step 5

Enter the station S/N number manually.

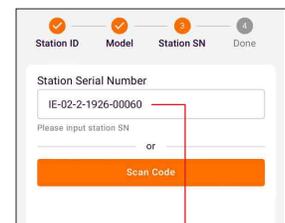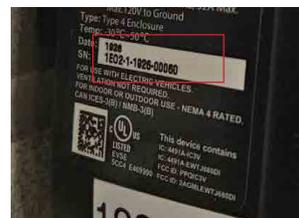

 Commissioning is now complete. The station can be found in Noodoe EV OS.