


Commissioning Manual

1 Connect Tritium RT50 to Noodoe OCPP URL (wss://ocpp.noodoe.com) via MyTritium Before EV OS Commissioning.

2 Attach the Station Label Sticker as Shown Below.

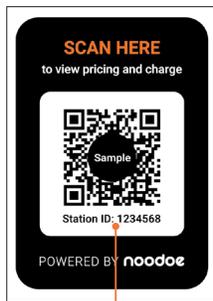

Station ID: 1234568

3 Noodoe EV OS Commissioning

Step 1

Scan either QR code to access the Installer Panel and initiate the charging station commissioning process.

Step 2

Input the Project Code provided by Noodoe or the charge point operator.

Step 3

Verify that the 7-digit auto-populated Station ID matches the 7 digits on the Station ID stickers.

Step 4

Select the appropriate Tritium RT50 model specifications:

- Output Details: **50kW, single output**
- Connector Type (1): **CCS1**
- Connector Type (2): **CHAdeMO**

Step 5

Find the 9-digit barcode number on the Tritium RT50 sticker (e.g. 012200319). Enter the station number (SN) from that barcode manually using the following format: **veefil-12200319** (leaving off the initial 0).

* "**veefil-**" must be lower case.

 Commissioning is now complete. The station can be found in Noodoe EV OS.