

Commissioning Manual

1 Connect Tritium RTM 50 to Noodoe OCPP URL (wss://ocpp.noodoe.com) via MyTritium Before EV OS Commissioning.

2 Attach the Station Label Sticker as Shown Below.



Station ID: **1234568****00**

Station ID number Connector number
 Left: 00
 Right: 01


3 Noodoe EV OS Commissioning

Step 1

Scan either QR code to access the Installer Panel and initiate the charging station commissioning process.


Step 2

Input the Project Code provided by Noodoe or the charge point operator.

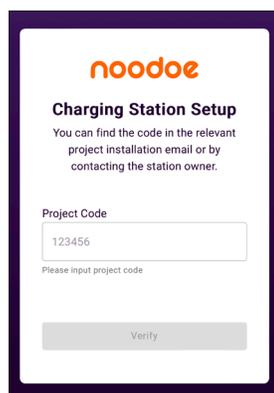

Step 3


Verify that the 7-digit auto-populated Station ID matches the 7 digits on the Station ID stickers.

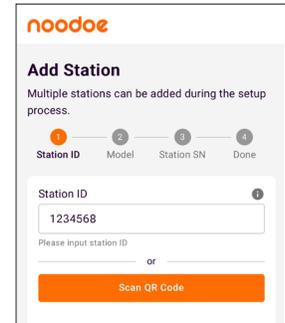

Step 4

Select the appropriate charger specifications:

- Output Details: **50kW, duo outputs**
- Connector Type (1): **CCS1**
- Connector Type (2): **CCS1**

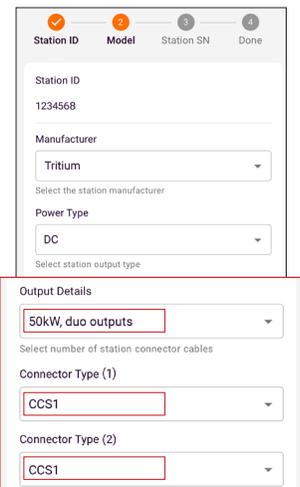

Step 5

Find the 9-digit barcode number on the Tritium RT50 sticker (e.g. 012200319). Enter the station number (SN) from that barcode manually using the following format: **veefil-12200319** (leaving off the initial 0).

* "**veefil-**" must be lower case.



Commissioning is now complete. The station can be found in Noodoe EV OS.