

# Commissioning Manual

**1** Connect VersiCharge Ultra 50 to Noodoe OCPP URL (wss://ocpp.noodoe.com) via MyTritium Before EV OS Commissioning.

**2** Attach the Station Label Sticker as Shown Below.



Station ID: 1234568


**3** Noodoe EV OS Commissioning

**Step 1**

Scan either QR code to access the Installer Panel and initiate the charging station commissioning process.


**Step 2**

Input the Project Code provided by Noodoe or the charge point operator.

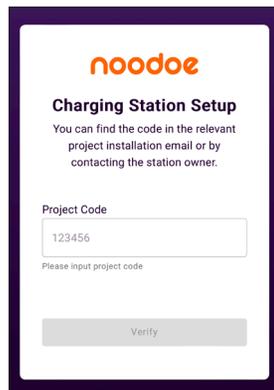

**Step 3**


Verify that the 7-digit auto-populated Station ID matches the 7 digits on the Station ID stickers.

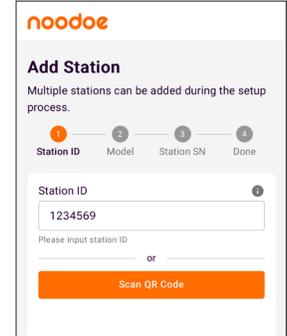

**Step 4**

Select the appropriate VersiCharge Ultra 50 model specifications:


- Output Details: **50kW, single output**
- Connector Type (1): **CCS1**
- Connector Type (2): **CHAdEMO**

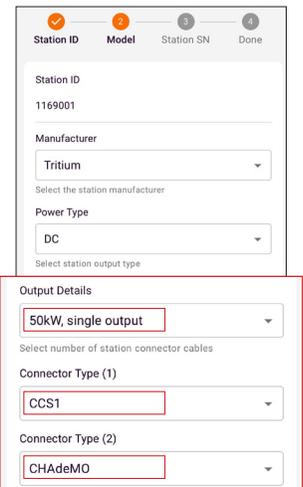

**Step 5**

Find the 9-digit barcode number on the Siemens VersiCharge sticker (e.g. 012200319). Enter the station number (SN) from that barcode manually using the following format: **veefil-12200319** (leaving off the initial 0).

\* "**veefil-**" must be lower case.

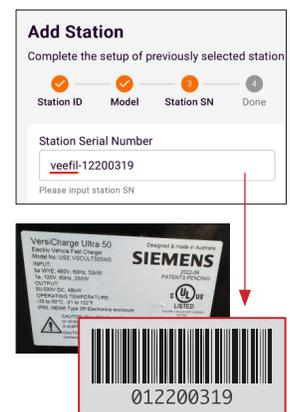

 Commissioning is now complete. The station can be found in Noodoe EV OS.