

XCHARGE C6

# Commissioning Manual

**1** Connect XCHARGE C6 to Noodoe OCPP URL (wss://ocpp.noodoe.com) Before EV OS Commissioning.

**2** Attach the Station Label Sticker as Shown Below




Station ID: 123456800

Station ID number: 1234568  
 Connector number: 00 (Left), 01 (Right)

**3** Noodoe EV OS Commissioning

**Step 1**

Scan either QR code to access the Installer Panel and initiate the charging station commissioning process.

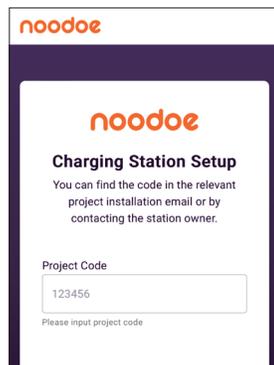


**Step 2**

Input the Project Code provided by Noodoe or the charge point operator.

**Step 3**


Verify that the 7-digit auto-populated Station ID matches the first 7 digits on the Station ID stickers.

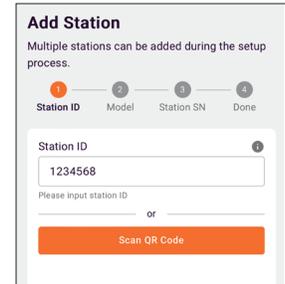

**Step 4**

Select the appropriate XCHARGE C6 specifications:


- Output Details: **95kW, dual outputs**
- Connector Type (1): **Tesla**
- Connector Type (2): **CCS1**

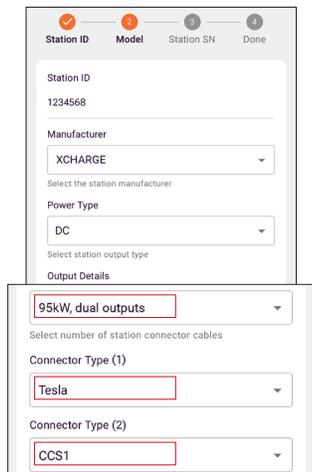

**Step 5**

Enter the station S/N number manually.

Find the product label here

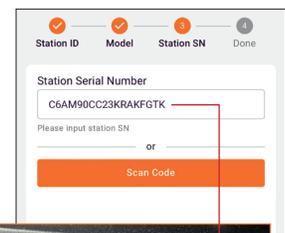

Commissioning is now complete. The station can be found in Noodoe EV OS.